
Modern and Futuristic

Trail BlazerBlackMOA™ Portable Cassette Stove

User manual

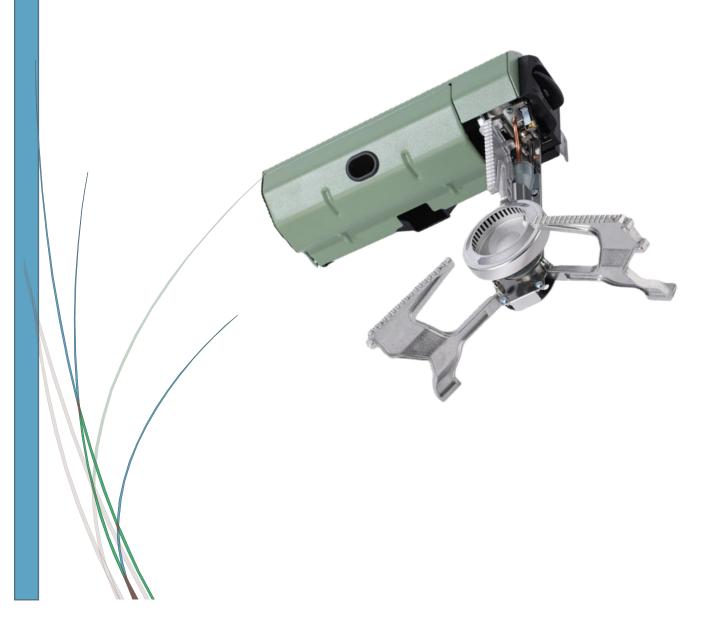



User Manual for BlackMOA™ Portable Cassette Stove

Ensure you have gone through this user manual before proceeding to use this stove. Understand each item as it's important for a better camping experience. In case of an emergency contact 111.

Important Safety Information

- 1. **Read these instructions carefully** before using the appliance.
- 2. **Use outdoors only** or in well-ventilated areas to avoid the build-up of dangerous gases.
- 3. **CAUTION***: Accessible parts may be very hot during and after use. Keep **young children** away from the appliance.
- 4. Always ensure the appliance is placed **on a stable, flat surface** before use.
- 5. Check seals and connections before use to ensure there are no leaks.
- 6. If you **smell gas**:
 - Do not ignite the appliance.
 - o Move the appliance to a **well-ventilated area** away from any sources of flame.
 - Check for leaks using soapy water (never use a flame to check for leaks).
- 7. Do not use the appliance if it has **damaged seals** or if it is leaking.

Product Specifications

Model: Trail Blazer (BM-1001)

• **Gas Type**: Butane

• Nominal Heat Input: 2600W

• **Ignition**: Electric

• Pressure Range: 0.5 - 2 bar

• Consumption: 190g/h

Category: Outdoor Gas Burning AppliancesCylinder Spec: 250g Butane Gas Cartridges

• Size:

o **Extended**: 275 x 80 x 105 mm + φ 260 x 100 mm

Folded: 250 x 90 x 105 mm


Weight: 1.4 kg

Before First Use

1. Assembly:


- o The appliance is **pre-assembled**. No further assembly is required.
- o **Gas cylinder** should be **properly installed** by aligning it with the compartment (as shown in the product design) and ensuring it's securely connected.
- o **Check the seals** for any damage before connecting the gas cartridge.


2. Installation & Usage:

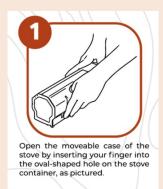







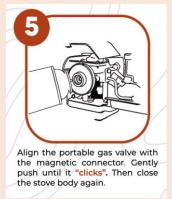

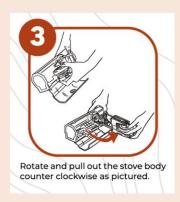

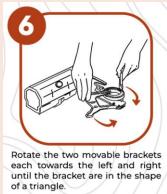

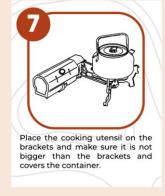



- Place the appliance outdoors or in a well-ventilated space away from any flammable materials.
- The stove should be placed on **a flat, stable surface** to avoid tipping over, especially when extending the burner arms (as seen in the product design).
- o **Do not leave the appliance unattended** while in use.
- Avoid moving the appliance while it is in operation to prevent tipping or spills.

Maintenance and Care

1. Cleaning:

- o **Turn off the appliance** and allow it to cool before cleaning.
- o Clean the stove surface with a **damp cloth**. Do not use **abrasive** materials that may damage the surface.
- o The burner and gas inlet must remain free from dirt or grease to ensure proper operation.

2. Storage:

- Store the appliance in a **dry, cool place**, away from direct sunlight and **heat sources**.
- o Disconnect the gas cylinder when not in use.
- Ensure the appliance is disconnected and gas is turned off before storing.

3. Replacement of Parts:

- o **Replace seals** or other parts only with **approved parts** from the manufacturer.
- o **Do not modify** the appliance in any way as this may pose a safety risk.

Troubleshooting

Problem	Solution
No flame	- Ensure gas cylinder is securely connected.
	- Check that the ignition button is working.
Gas leak	- Turn off the appliance immediately. Check for leaks using soapy water.
	- If the leak persists, replace the seals and reconnect.
Low flame or no flame	Check the gas pressure; ensure it is within the required range (0.52 bar).
	- Clean any dirt or blockages from the burner.

Disposal

- Dispose of the appliance in accordance with **New** Zealand **regulations**
- Do not dispose of the appliance or any parts in **fire** as it could explode.

Contact Information

For support, parts, or other inquiries, please contact:

Myst Enterprise Ltd.

Website: www.mystenterprise.com Email: info@mystenterprise.com

